

Drain engine oil and refill. Special or synthetic oils are subject to additional charge.

Replace oil filter.

Check for excessive oil leaks.

Check the timing belts (Cambelt) replacement Interval and report if replacement due according to age.

Check condition and security of under tray.

Check for correct clutch operation.

Check for cracks gearbox operation.

Check and top up clutch fluid where applicable.

Check driveshaft gaiters for security and report leaks.

Check operation of exterior lights.

Check horn.

Check battery condition and print results.

Check dashboard warning lights.

Check and top up power steering reservoir way clickable.

Check steering suspension components for wear and corrosion.

Check steering rack gators condition.

Check bearings for excessive play or roughness.

Carry out shock absorber bounce test.

Inspect exhaust system (including catalyst if fitted) for leaks security noise.

Visual check through exhaust smoke.

Check brake pads for wear or damage.

Check brake calliper is for leaks and security.

Check service brake shoes for wear or damage - clean and adjust if required (excludes internal handbrake shoes).

Inspect operation of wheel cylinders and report to the leaks.

Visually check brake hydraulic system pipes and hoses for any leaks chafing or corrosion.

Check security of Handbrake to linkages and travel. Lubricate and adjust if required.

Check brake disks and drums for wear, cracks, corrosion and scoring or pitting (excluding internal drums).

Check brake fluid level and top up if required.

Remove road wheels.

Check tyre size and whether tyre is fitted to side wall instructions.

Check tyre condition and tread depth (including spare).

Check and adjust tyre pressures (including spare).

Set wheel nut torque to manufacturer's settings.

Check wheels for correct balance (including spare).

Check windscreen wiper condition and operation.

Check rear wiper condition and operation (if fitted).

Check windscreen wash operations align jets and top of required.

Advise if cabin filters is required according to age/mileage recommendations and last change.

Reset vehicle service light where applicable (subject to data and tooling availability).

Conduct a road test.

Stamped service book.

Check radiator condition.

Check coolant cap Seals.

Check coolant hoses for leaks and condition and security.

Check electric cooling fan for operation where applicable.

Check condition and tension of fan or alternator belt. Adjust or report on condition.

Check condition and adjust auxiliary drive belt if required (excluding cambelt).

Replace air Filter.

Check fuel cap Seal condition.

Check visual condition of fuel lines.

Grease prop/shaft if applicable.

Check on top of axle and/or transaxle oil if applicable.

Top up gearbox fluid where applicable and not sealed.

Check battery security and lubricate terminals.

Top up battery/non-sealed units only.

Visual inspection of HT (high tension) leads.

Grease steering and suspension where applicable.

Check brake servo operation.

Check windscreen for chips and cracks.

Check mirror condition (internal and external).

Check number plate condition.

Check seat belts - front and rear including lap belt.

Check operation of all external door locks.

Lubricate accessible door hinges (with white Grease).

Lubricate bonnet catch.

Drain out cooling system and replace coolant to correct specification.

Replace Spark Plugs for petrol engines only. An additional applies for platinum or long-life plugs.

Replace fuel filter (if fitted and external from fuel tank).

Test effectiveness of starter motor.

Test alternator charging rate – check security.